

Dear Customer,

Thank you so much for purchasing this electric nail clipper.

Please read these operating instructions and follow the listed instructions and tips so that you can use your new nail clippers to their full potential.

Scope of delivery

- Electric nail clippers and polishers
- cleaning brush
- USB-C charging cable
- User manual

Additionally needed

- Power supply (e.g. SD-2201)


Product variants

- Article number: Difference
- Article number: Difference

Technical data

power supply	Lithium-ion battery (3.7 volts) DC)
Battery capacity	400 mAh / 1.48 Wh
current	max. 1 A
Protection class	IP43
Protection class	III (Protection by low voltage)
Protection class pictograms	
Dimensions (W x H) x T)	62 x 72 x 26 mm
Weight	92 g

Product details

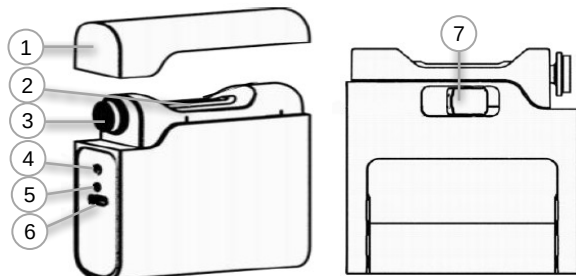

- | | | | |
|---|-----------------|---|---------------------|
| 1 | cover | 5 | Status LED |
| 2 | nail clippers | 6 | USB-C port |
| 3 | Polishing wheel | 7 | Nail collection box |
| 4 | On off | | |

commissioning

1. Charge the battery

Fully charge the nail clippers before first use. To do this, connect the included charging cable to the USB-C port and the other end to a suitable power adapter. Plug the power adapter into a wall socket. The status LED flashes during the charging process and glows steadily when the battery is fully charged.

use

1. Switching on and off

Remove the cover from the device and press the on/off button to turn on the nail clippers. Press the power button again to turn the device off.

2. Cut nails



DANGER!

Use the nail clippers only for cutting fingernails and toenails. Do not insert any other body parts or objects into the nail clippers.

Turn on the nail clippers and insert a fingernail into the nail clippers. Rotate your finger or device sideways to cut the nail in a rounded shape.

3. Polish your nails



A NOTICE:

The polishing wheel is only suitable for polishing and grinding fingernails and toenails. Make sure that no other body parts or objects come into contact with the polishing wheel.

1. Place the nail clippers flat on a stable surface and hold them firmly.
2. Turn on the nail clippers.
3. Hold a fingernail against the polishing wheel and rotate your finger to achieve an even polishing result. Be careful not to polish the same spot for too long to avoid unevenness.

4. Empty the nail collection box

Open the nail collection box using the slightly protruding plastic handle and dispose of the nail clippings.

5. Cleaning



A NOTICE:

Switch off the nail clippers before cleaning.

- Clean the nail collection box after emptying it using the included cleaning brush.
- Clean the polishing wheel with the supplied cleaning brush, or twist and pull the polishing wheel to remove it. Rinse the polishing disc with lukewarm water and reinsert it into the nail clipper.



Safety instructions

- This user manual is designed to familiarize you with how this product works. Therefore, keep these instructions in a safe place so that you can refer to them at any time. Pass them on to subsequent users.
- Please observe the safety instructions when using the product.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, unless they are supervised by a person responsible for their safety or have received instructions from them on how to use the device.
- The product and accessories are not toys for children. Therefore, keep children away from it. Children must be supervised to ensure they do not play with the product.
- Modifying or altering the product will compromise product safety. Caution: Risk of injury!
- All modifications and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer. Never open the product yourself. Never attempt repairs yourself!
- Handle the product carefully. It can be damaged by bumps, blows, or falls from even a low height.
- Keep the product away from moisture and extreme heat.
- Never immerse the product in water or other liquids.
- Check the product for damage before use. Do not use it if it shows visible damage.
- Never use the product after a malfunction, e.g. if it has fallen into water, been dropped, or damaged in any other way.
- When charging via a wall outlet, ensure that the product is plugged into an easily accessible outlet so that you can quickly disconnect the product from the mains in an emergency.
- Never unplug the power adapter from the wall socket with wet hands.
- If you want to unplug the power supply from the wall socket, always pull directly on the plug. Never pull on the cable, it could be damaged. Never transport the device by its cable.
- Check that the mains voltage specified on the nameplate matches that of your electrical network.
- Ensure that the charging cable is not kinked, pinched, run over, or comes into contact with heat sources or sharp edges. It must also not become a tripping hazard.
- Unplug the device after each use or in case of malfunctions during operation.

- Technical specifications subject to change without notice. Errors and omissions excepted.

Important information about the battery

- Batteries should be kept out of the reach of children.
- Do not heat the battery above 60°C and do not throw it into fire: Danger of fire, explosion and blaze!
- Do not short-circuit the battery.
- Do not attempt to open batteries.
- Stay close by while the battery is charging and check its temperature regularly.
- Do not subject the battery to mechanical stress. Avoid dropping, hitting, bending, or cutting the battery.
- Stop the charging process immediately if the device overheats significantly. A battery that heats up excessively or becomes deformed during charging is defective and must not be used further.
- When charging the battery, be sure to observe the correct polarity of the charging plug. Incorrect charging plug connection, unsuitable charger or reversed polarity poses a risk of short circuit and explosion!
- Never fully discharge the battery, this will shorten its lifespan.
- If the battery is to be stored for a longer period of time, a residual capacity of approx.] is recommended. 30% of the loading volume.
- Avoid direct sunlight at the storage location. The ideal temperature is 10 – 20 °C.

Important information on device disposal

This electrical appliance does not belong in household waste. For proper disposal, please contact the public collection points in your community. Details regarding the location of such a collection point and any possibly Please refer to the information provided by the respective municipality for any existing quantity restrictions per day/month/year.

Declaration of Conformity

PEARL Inc. hereby declares that the product CX-2220 is in compliance with the RoHS Directive 2011/65/EU + (EU)2015/863 and the EMC Directive 2014/30/EU.

Kurtasz, A.

Quality Management, Dipl. Ing. (FH) Andreas Kurtasz

The full declaration of conformity can be found at www.pearl.de/support. Enter the item number CX-2220 in the search field there.



Information and answers to frequently asked questions (FAQs) about many of our products, as well as necessary Updated manuals can be found on the website:

www.sichler-beauty.de

Enter the item number or item name in the search field there.

