

Dear Customer,

Thank you very much for purchasing this electric water gun.

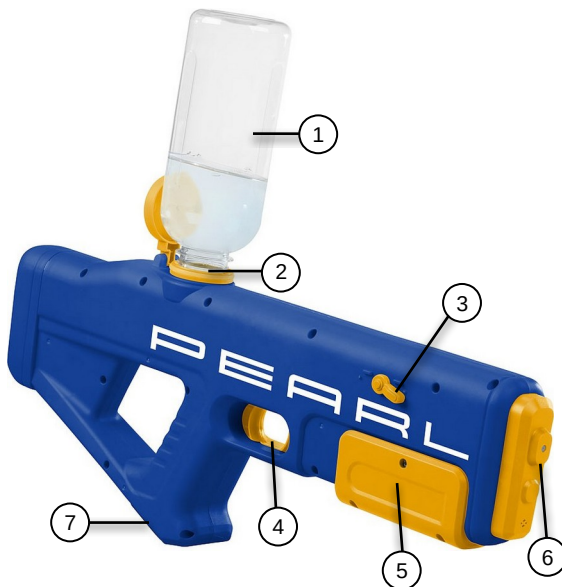
Please read these operating instructions and follow the listed instructions and tips to ensure you can use your new water gun to its full potential.

Scope of delivery

- Electric water gun
- Top-mounted tank
- Battery
- USB charging cable
- Small screwdriver
- User manual

Technical data

power supply		Li- Ion battery (3.7 volts) DC)
Battery capacity		500 mAh
Charging current		5 volts, 500 mA (via USB)
water tank		300 ml volume
Top-mounted tank		350 ml volume
Protection class		III (Protection by low voltage)
Mass		40 x 17 x 4 cm
Weight		approx. 400 g

Product details

1. Top-mounted tank
2. Water inlet
3. Mode switch
4. Trigger button
5. Pump mechanism
6. Water outlet
7. battery compartment

charging battery**A NOTICE:**

Fully charge the battery before first use. Always charge the battery whenever the shooting performance drops significantly. Additionally, if the device is not going to be used for a long time, charge the battery at least every 3 months.

1. Connect the 2-pin charging plug on the battery connection cable to the 2-pin plug of the USB charging cable.
2. Connect the USB plug of the USB charging cable to a suitable USB power supply. A red status LED lights up on the USB plug while the battery is charging. It goes out as soon as the battery is fully charged.

3. After charging the battery, unplug the power adapter from the wall socket and disconnect the charging cable from the battery

Insert battery into water gun

1. Using the small screwdriver, unscrew the screw of the battery compartment cover and then open the battery compartment of the water gun.
2. Connect the 2-pin charging plug on the battery connection cable to the 2-pin plug of the connection cable in the battery compartment.
3. Insert the battery into the battery compartment and replace the battery compartment cover.
4. Use the small screwdriver to tighten the screw on the battery compartment cover.

Fill water tank**automatically**

1. Tilt the mode switch so that it points backward.
2. Immerse the front (water outlet) of the water gun into a container filled with water.

**DANGER!**

Do not immerse the battery compartment in water. The battery could be damaged!

3. Slide the shutter release button forward. The intake process starts. The tank is full when water comes out of the back of the water gun.

manually

1. Open the water tank lid and fill the water tank with approx. 300 ml of water.
2. Close the water tank lid again.
3. Alternatively, you can fill the add-on tank and screw it into the water inlet.

Use a water gun

1. To use the pump mechanism, tilt the mode switch so that it points forward.
2. To use automatic mode, tilt the mode switch so that it points backwards.

**DANGER!**

Do not aim at eyes or face!



- Press the trigger button. In automatic mode, the water gun fires with each press of the trigger button. In pump-action mode, you have to pump once for each shot.

Safety instructions



WARNING!

Small parts that can be swallowed; there is a risk of choking!

Suitable for children aged 6 and up!



Not suitable for children under 3 years old!

- This user manual is designed to familiarize you with how this product works. Therefore, keep these instructions in a safe place so that you can refer to them at any time. Pass them on to subsequent users.
- Please observe the safety instructions when using the product.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, unless they are supervised by a person responsible for their safety or have received instructions from them on how to use the device.
- Modifying or altering the product will compromise product safety. Caution: Risk of injury!
- All modifications and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer. Never open the product yourself. Never attempt repairs yourself!
- Handle the product carefully. It can be damaged by bumps, blows, or falls from even a low height.
- Keep the product away from extreme heat and direct sunlight.
- Never immerse the product in water or other liquids.
- Check the product for damage before use. Do not use it if it shows visible damage.
- Never use the product after a malfunction, e.g. if it has fallen into water, been dropped, or damaged in any other way.
- When charging the battery at a power outlet, make sure that the battery is charged at an easily accessible outlet so that

you can quickly disconnect the product from the mains in an emergency.

- Never unplug the product from the wall socket with wet hands.
- If you want to unplug the device from the socket, always pull directly on the plug. Never pull on the cable, it could be damaged. Never transport the device by its cable.
- Check that the mains voltage specified on the nameplate matches that of your electrical network.
- Ensure that the power cable is not kinked, pinched, run over, or comes into contact with heat sources or sharp edges. It must also not become a tripping hazard.
- Unplug the device after each use or if any problems occur during charging.
- The manufacturer accepts no responsibility for incorrect use resulting from failure to follow the instructions for use.
- Technical specifications subject to change without notice. Errors and omissions excepted.

Important information about the battery and its disposal

Batteries do not belong in household waste. As a consumer, you are legally obliged to return defective batteries that can no longer be charged for proper disposal. You can drop off your batteries at the public collection points in your community or anywhere that sells batteries of the same type.

- Batteries should be kept out of the reach of children.
- Do not heat the battery above 60°C and do not throw it into fire: Danger of fire, explosion and blaze!
- Do not short-circuit the battery.
- Do not attempt to open batteries.
- Stay close by while the battery is charging and check its temperature regularly.
- Do not subject the battery to mechanical stress. Avoid dropping, hitting, bending, or cutting the battery.
- Stop the charging process immediately if the device overheats significantly. A battery that heats up excessively or becomes deformed during charging is defective and must not be used further.
- Remove the battery from the device if you will not be using it for an extended period of time.
- Never fully discharge the battery, this will shorten its lifespan.
- Make sure to observe the correct polarity of the battery. An incorrectly inserted battery can lead to the destruction of the device – risk of fire.

- If the battery is to be stored for a longer period of time, a residual capacity of approx.] is recommended. 30% of the loading volume.
- Avoid direct sunlight at the storage location. The ideal temperature is 10 – 20 °C.

Declaration of Conformity

PEARL Inc. hereby declares that the product JX-8086-675 is in compliance with the RoHS Directive 2011/65/EU + (EU)2015/863, the EMC Directive 2014/30/EU and the Toy Safety Directive 2009/48/EC.

Sebastian Herguijuela

Product Compliance
Sebastian Herguijuela

The full declaration of conformity can be found at www.pearl.de/support. Enter the item number JX-8086 in the search field there.



Manual download

Manual / Mode d'emploi /
Istruzioni / Οδηγίες / Instructies
/ Инструкции / Instrucciones /
Ohjeet / Talimatlar



www.email.com/a328086

A	ALB	AND	BE	BG	BLR	CY
CZ	DK	D	E	EST	F	FIN
GB	GR	H	HR	I	IRL	L
LT	LV	M	MDA	NL	NO	P
PL	RO	RUS	S	SK	SLO	TUR

