

Battery-powered handheld massager



with 4 attachments and 6 intensity levels

ZX-6368-675

Dear Customer,

Thank you for purchasing this compact cordless handheld massager. Thanks to the four interchangeable attachments, the handheld massage device is versatile and you do not need a masseur to relax your muscles.

Please read these operating instructions and follow the listed instructions and tips so that you can use your new battery-powered handheld massager to its full potential.

Scope of delivery

- Battery-powered handheld massager
- 4 essays
- storage bag
- USB charging cable
- User manual

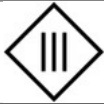
Massage attachments

	U-shaped attachment for massaging the Acupuncture points
	Ball attachment for large-area massage e.g. on legs, back and buttocks
	Mushroom-shaped attachment for massaging internal and outer muscles, e.g., on the abdomen, chest, and arms
	Conical attachment for targeted massage e.g. soles of the feet and palms of the hands

Optional accessories:

- USB power supply (e.g. SD-2201)

Technical data

Battery	type	Lithium-ion
	Tension	7.4 volt
	capacity	1200 mAh
Input		5 volts DC, 1 A (via USB)
Protection class		IP20
Protection class pictograms		
Mass		160 x 135 x 47 mm
Weight		445 g

Product details



1. Massage head
2. Ergonomic handle
3. Status LEDs
4. On/Mode/Off button
5. USB charging port

commissioning

1. Charge the battery



A NOTICE:

Charge the integrated battery before first use
Use completely.

1. Plug the supplied USB charging cable into the USB charging port of the massage device and into a suitable USB power adapter.
2. Then plug the USB power adapter into a suitable power outlet. The status LEDs blink during the charging process.
3. Disconnect the charging cable from the massage device and the USB power adapter from the wall socket as soon as the status LEDs light up continuously, indicating that the massage device is charged.

2. Attach the attachment

With the massage device switched off, insert your desired attachment into the corresponding slot. It should audibly click into place and then no longer be able to be pulled out without slight force.

3. Use

1. Press and hold the On/Mode/Off button for approx. Press and hold for 3 seconds to turn on the massager.
2. Press the On/Mode/Off button briefly again to start the massage function.
3. Place the massage head on the desired area of the body and move it over the desired muscle with gentle pressure.



A NOTICE:

Do not use any medical or cosmetic creams or ointments on the affected body areas immediately before application.

4. Press briefly and possibly Repeatedly press the On/Mode/Off button to adjust the intensity. The current level is indicated by the number of illuminated status LEDs on the top.
5. To turn the massage device off again, press and hold the On/Mode/Off button for approx. Pressed for 3 seconds.



A NOTICE:

The massage device automatically ends the massage program after 15 minutes of operation.



Safety instructions

- This user manual is designed to familiarize you with how this product works. Therefore, keep these instructions in a safe place so that you can refer to them at any time. Pass them on to subsequent users.
- Please observe the safety instructions when using the product.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, unless they are supervised by a person responsible for their safety or have received instructions from them on how to use the device.
- If you are affected by any of the following medical conditions, please consult a doctor before using the massage device:
 - osteoporosis
 - Diseases of the spine (e.g., herniated disc, etc.)
 - Balance disorders
 - Dizziness attacks
 - pregnancy
 - Recent surgeries
- The massage device and accessories are not toys for children. Therefore, keep children away from it. Children must be supervised to ensure they do not play with the product.
- Cleaning and user maintenance must not be carried out by children unless they are supervised.
- Modifying or altering the product will compromise product safety. Caution: Risk of injury!
- All modifications and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer. Never open the product on your own. Never attempt repairs yourself!
- Handle the product carefully. It can be damaged by bumps, blows, or falls from even a low height.
- Keep the product away from moisture and extreme heat.
- Do not use the massage device in the bathroom.
- Never immerse the product in water or other liquids.
- Check the product for damage before use. Do not use it if it shows visible damage.
- Never use the product after a malfunction, e.g. if it has fallen into water, been dropped, or damaged in any other way.
- When operating the product from a power outlet, ensure that it is plugged into an easily accessible outlet so that you can quickly disconnect it from the mains in an emergency.

- Never unplug the product from the wall socket with wet hands.
- If you want to unplug the device from the socket, always pull directly on the plug. Never pull on the cable, it could be damaged. Never transport the device by its cable.
- Ensure that the power cable is not kinked, pinched, run over, or comes into contact with heat sources or sharp edges. It must also not become a tripping hazard.
- Unplug the device after each use or in case of malfunctions during operation.
- The device may only be used for its intended purpose, in accordance with these instructions for use.
- Technical specifications subject to change without notice. Errors and omissions excepted.

Important information about the battery

- Batteries should be kept out of the reach of children.
- Do not heat the battery above 60°C and do not throw it into fire: Danger of fire, explosion and blaze!
- Do not short-circuit the battery.
- Do not attempt to open batteries.
- Stay close by while the battery is charging and check its temperature regularly.
- Do not subject the battery to mechanical stress. Avoid dropping, hitting, bending, or cutting the battery.
- Stop the charging process immediately if the device overheats significantly. A battery that heats up excessively or becomes deformed during charging is defective and must not be used further.
- When charging the battery, be sure to observe the correct polarity of the charging plug. Incorrect charging plug connection, unsuitable charger or reversed polarity poses a risk of short circuit and explosion!
- Never fully discharge the battery, this will shorten its lifespan.
- If the battery is to be stored for a longer period of time, a residual capacity of approx.] is recommended. 30% of the loading volume.
- Avoid direct sunlight at the storage location. The ideal temperature is 10 – 20 °C.

Important information on device disposal

This electrical appliance does not belong in household waste. For proper disposal, please contact the public collection points in your community.

Details regarding the location of such a collection point and any possibly Please refer to the information provided by the

respective municipality for any existing quantity restrictions per day/month/year.

Declaration of Conformity

PEARL Inc. hereby declares that the product ZX-6368-675 is in compliance with the RoHS Directive 2011/65/EU + (EU)2015/863 and the EMC Directive 2014/30/EU.



Quality Management, Dipl. Ing. (FH) Andreas Kurtasz

The full declaration of conformity can be found at www.pearl.de/support. Enter the item number ZX-6368 in the search field there.

Information and answers to frequently asked questions (FAQs) about many of our products, as well as necessary Updated manuals can be found on the website:

www.newgen-medicals.de

Enter the item number or item name in the search field there.

