

Dear Customer,

Thank you so much for purchasing this electric lunchbox. Thanks to it, you can enjoy a hot meal anytime – whether in the office or on the go in the car.

Please read these operating instructions and follow the listed instructions and tips to ensure you can make the best use of your new lunchbox.


Scope of delivery

- Lunchbox
- Stainless steel container
- Small tin with lid
- 1 fork
- 1 spoon
- 230V power cable
- Automotive power cables
- Insulated bag
- User manual

Technical data

Rating	220 – 230 V AC 50/60 Hz, 12 / 24 V DC	
Power consumption	80 Watt	
capacity	Stainless steel container	1.5 liter
	Small tin with lid	375 ml
Protection class		Protection class II: Protection through double or reinforced insulation
	For indoor use only	
	Food contact LFGB food	
Mass	165 x 240 x 103 mm	
Weight	698 g	

Product details

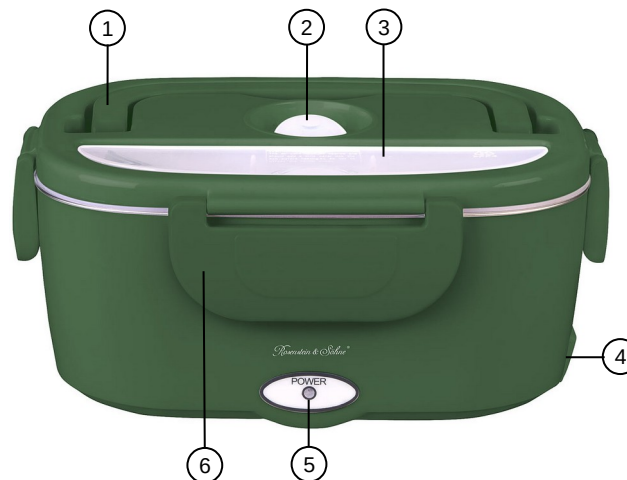

- | | |
|-----------------------------------|---------------------------|
| 1. Carrying handles | 4. Power cable connection |
| 2. Steam outlet cap | 5. Power LED |
| 3. Compartment for fork and spoon | 6. Mounting clamp |

use


1. Fill the stainless steel container with the desired food items.



A NOTICE:

If you want to reheat leftover food that is already older, it is recommended to add a little water. This helps them to soften and heat up evenly.

2. Place the lunchbox on a stable, flat and dry surface and insert the stainless steel container.

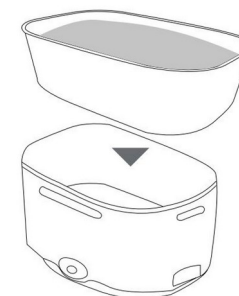


3. Place the lid of the lunchbox on top and secure it using its fastening clips.



A NOTICE:

It is recommended to always put the lid on and take it off with both hands at the same time, instead of using one side first and then the other.

4. Remove the steam vent cap.

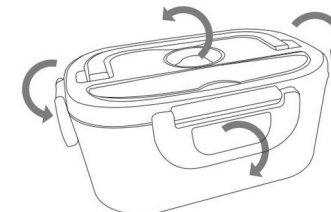

DANGER!

Always remove the steam outlet cap before heating. Otherwise, the steam cannot escape, which can lead to the lunchbox swelling and deformation. This can cause irreparable damage to the lunchbox.

5. Open the cover over the power cable connector and connect one end of the power cable to the connector.
6. Plug the other end of the power cable into a wall socket or into the cigarette lighter socket of your vehicle. The POWER LED is lit. The heating process starts.



A NOTICE:

The heating time can vary depending on the type and amount of food added, as well as the room temperature. At a room temperature of approx. 24°C, it takes approximately 25 minutes to heat up the



food. If the food comes directly from the refrigerator, the warming time will be correspondingly longer.

7. Once the food is heated, unplug the power cord from the socket . the cigarette lighter socket before you start eating.

Cleaning and storage



DANGER!

Unplug the device and allow it to cool down completely before cleaning.

- Always unplug your food after reheating it.
- Clean the lunchbox immediately after each use to prevent unpleasant odors from developing.
- Do not use solvents, gasoline, cleaning agents, hard brushes or steel wool for cleaning.
- Clean the lunchbox with a damp, soft cloth.
- If you are not going to use the lunchbox for an extended period of time, clean and dry it thoroughly and store it in a dry and well-ventilated environment.

Problem solving

problem	Possible reason	Solution
Power LED does not light up	- The plug is not in the socket. - The power cable or the heating element is damaged.	- Plug the plug into the socket. - Contact customer service.
The temperature of the food is too low after reheating.	- The warm-up time is too short. - The ambient and food temperatures are low	Extend the warm-up time.

Safety instructions

- Read the instructions carefully. It contains important information for the use, safety and maintenance of the device. Keep the instructions for use carefully and pass them on to subsequent users if necessary.
- The device may only be used for its intended purpose, in accordance with these instructions for use.
- Observe the safety instructions when using the product.
- Before commissioning, check the device, its connecting cable and accessories for damage. Do not use the device if it shows visible damage.
- Only operate the device using standard household electrical outlets. Check that the mains voltage specified on the nameplate matches that of your electrical network.
- Do not pinch the connecting cable, do not pull it over sharp edges or hot surfaces; do not use the connecting cable for carrying.

- If the mains connection cable of this device becomes damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazards.
- Unplug the device: -after each use, -in case of malfunctions during operation, -before each cleaning of the device.
- Never pull the plug out of the socket by the power cord or with wet hands.
- The device is intended exclusively for household use or similar purposes. It may not be used for commercial purposes!
- This device is only suitable for indoor use.
- Ensure that the device is stable during operation and that the power cord cannot be used as a tripping hazard.
- Never use the device after a malfunction, e.g. if the device has fallen into water, been dropped, or damaged in any other way.
- The manufacturer accepts no responsibility for incorrect use resulting from failure to follow the instructions for use.
- Modifying or altering the product will compromise product safety. Caution: Risk of injury!
- All modifications and repairs to the device or accessories may only be carried out by the manufacturer or persons expressly authorized by the manufacturer.
- Make sure the product is powered by an easily accessible power outlet so that you can quickly disconnect the device from the mains in an emergency.
- Never open the product yourself. Never attempt repairs yourself!
- Handle the product carefully. It can be damaged by bumps, blows, or falls from even a low height.
- Keep the product away from moisture and extreme heat.
- Never immerse the product in water or other liquids.
- Never put the device in the dishwasher.
- Keep the device away from flammable materials.
- Use the device on flat, dry surfaces. Do not place it on uneven, damp surfaces.
- Do not disinfect the device in a high-temperature sterilization cabinet.
- Do not place the device in the refrigerator.
- Only connect the appliance to the power supply when it contains food.
- Warning: It is forbidden to immerse the device in water for cleaning!
- WARNING: It is forbidden to place the device in the freezer!
- Warning: It is forbidden to heat the device in a microwave oven.



- Warning: It is forbidden to disinfect the device in a disinfection device.
- Technical specifications subject to change without notice. Errors and omissions excepted.

Important disposal information

This electrical appliance does NOT belong in household waste. For proper disposal, please contact the public collection points in your community.

Details regarding the location of such a collection point and any possibly Please refer to the information provided by the respective municipality for any existing quantity restrictions per day/month/year.

Declaration of Conformity

PEARL Inc. hereby declares that the product JX-6041-675 is in compliance with the RoHS Directive 2011/65/EU + (EU)2015/863, the EMC Directive 2014/30/EU and the Low Voltage Directive 2014/35/EU.

Kurtasz, A.

Quality Management, Dipl. Ing. (FH) Andreas Kurtasz

The full declaration of conformity can be found at www.pearl.de/support. Enter the item number JX-6041 in the search field there.

